KitchenAid® OVEN PARTS

For Models:KEHC309JBL05, KEHC309JWH05, KEHC309JBT05, KEHC309JSS05
(Black) (White) (Biscuit) (Stainless Steel)

30" BUILT−IN ELECTRIC
DOUBLE OVEN
THERMAL CONVECTION LOWER
MICROWAVE CONVECTION UPPER

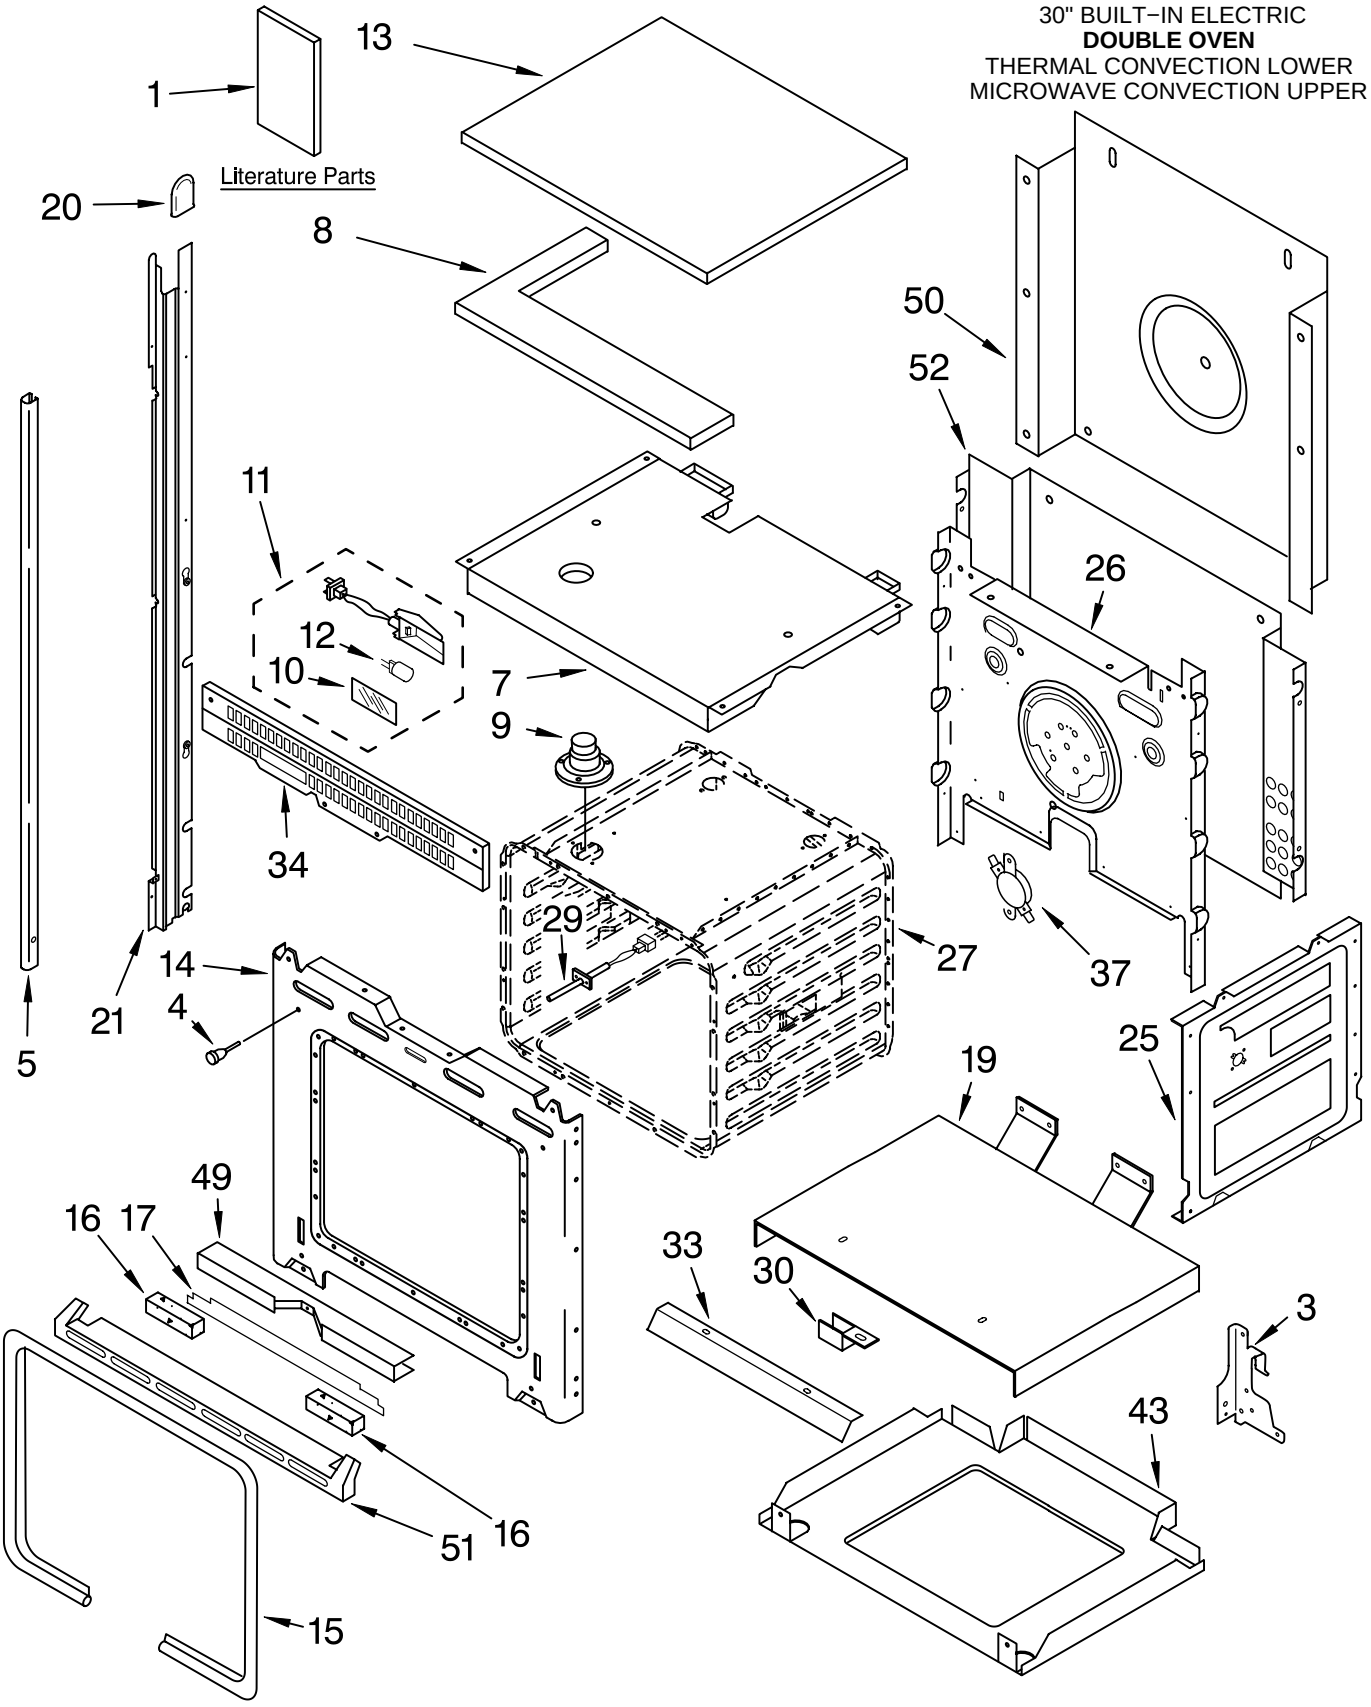

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models:KEHC309JBL05, KEHC309JWH05, KEHC309JBT05, KEHC309JSS05
(Black) (White) (Biscuit) (Stainless Steel)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1		Literature Parts
	LIT4455994	Installation Instructions
	LIT4456572	Use & Care Guide (Oven)
	LIT4453217	Use & Care Guide (Microwave)
	LIT4453330	Cooking Guide (Lable)
	LIT4452967	Chart, High Speed Cooking
	LIT8302001	Tech Sheet (Oven)
	LIT4449264	Easy Set Guide
	LIT3191638	Safer Cooking Tips
3		Hinge Receiver
	4455605	Left Hand
	4455606	Right Hand
4	4448520	Bumper, Door
5		Trim, Side Right Hand
	4455430	Black
	4455432	White
	4455434	Biscuit
	4452083	Stainless Steel Left Hand
	4455431	Black
	4455433	White
	4455435	Biscuit
	4452084	Stainless Steel
	8281236	Screw
7	4455865	Top Chassis
	4449809	Screw
8	4452492	Insulation, Top
9	4452158	Tube, Vent
	3196176	Screw
10	4452163	Lens, Light
11	4448972	Oven Light Assy
	4449748	Screw
12	4452164	Bulb, Light
13	4452491	Insulation, Grill
14	4455612	Frame, Front
	4449040	Screw
	4450118	Nut
15	4455382	Gasket, Door
16	4452490	Spacer, Foam
17	4452337	Insulation, Bottom Vent
19	4451478	Support, Insulation
20	4451605	Cap, Spacer
21		Rail, Side
	4450583	Right Side
	4450584	Left Side
	4448444	Grommet
	4449154	Screw
25	4455641	Side, Chassis (R.H. & L.H.)
	4449809	Screw
26	4452234	Back, Chassis
	4449809	Screw
27		Liner, Oven (Not serviceable)
29	4455636	Sensor
	4449154	Screw
30	4449845	Bracket, Support
	4449809	Screw
33	4452496	Deflector, Vent
34	4451667	Vent, Center
	4450289	Screw
37	4451442	Thermostat (TOD) (Temp.) SPST
	4449809	Screw
43	4455530	Base, Chassis
	4449809	Screw
49	4448933	Retainer, Gasket
	4449154	Screw
50	4451747	Cover, Back
	4449809	Screw
51		Trim, Bottom
	4455443	Black
	4455445	White
	4455447	Biscuit
	4455147	Stainless Steel
	4452152	Bracket, Mounting Bottom Trim
	4450289	Screw
52	4451756	Chassis, Back

FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

4449316	Insulation, Wrap
4450365	Insulation, Back

CONTROL PANEL PARTS

For Models:KEHC309JBL05, KEHC309JWH05, KEHC309JBT05, KEHC309JSS05
(Black) (White) (Biscuit) (Stainless Steel)

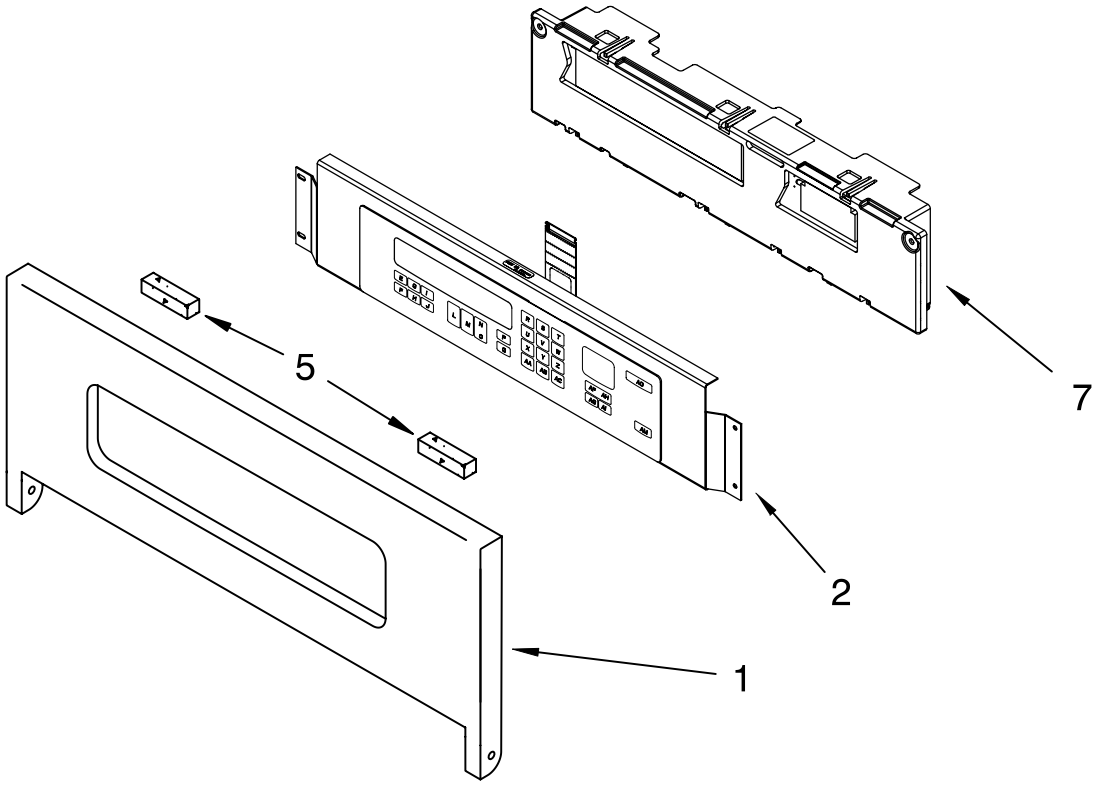

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1		Panel, Control
	4452604	Black
	4452605	White
	4452974	Biscuit
	4451791	Stainless Steel
2		Switch, Membrane
	8302014	Black
	8302016	White
	8302020	Biscuit
	8302018	Stainless Steel
5	4452260	Spacer, Foam
7	8301991	Assy, Control
	4449745	Screw

OVEN DOOR PARTS

For Models:KEHC309JBL05, KEHC309JWH05, KEHC309JBT05, KEHC309JSS05
(Black) (White) (Biscuit) (Stainless Steel)

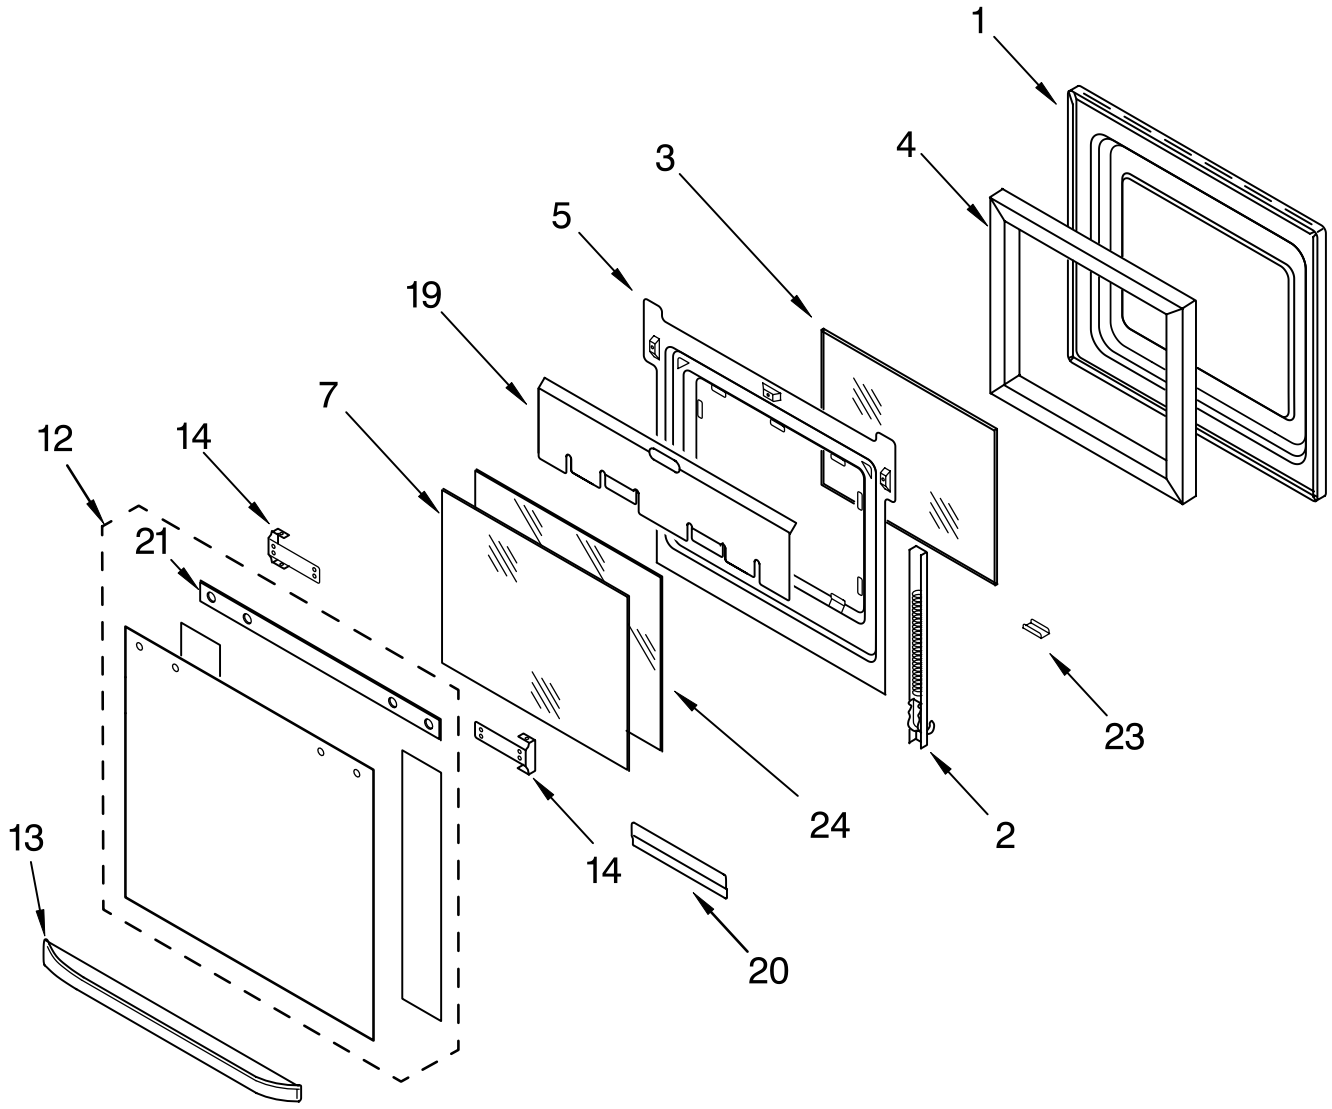

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	4455618	Door Liner
2		Hinge, Door
	8300575	R.Side (clear)
	8300576	L.Side (clear)
	8300577	R.Side (yellow)
	8300578	L.Side(yellow)
	4449743	Screw
3	4449259	Glass, Inner
4	4451722	Insulation, Door
5	8300778	Retainer, Glass
	4449809	Screw
7	4449263	Glass, Inner
12		Door Glass, Assy
	4455391	Black
	4455390	White
	4455395	Biscuit
	4452316	Stainless Steel
13		Door Handle
	4452502	Black
	4452503	White
	4452871	Biscuit
	4455851	Stainless Steel
14		Bracket, Handle
	4455803	Right Hand
	4455804	Left Hand
	3196184	Screw
19	4450362	Shield, Heat
	4449809	Screw
20	4450470	Retainer, Glass
	4449809	Screw
21	4452326	Seal, Door Top
23		Retainer, Glass−Clip
	4450863	Black
	4450864	White
	4452119	Biscuit
	4451432	Stainless Steel
24	8300974	Glass, Inner

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LATCH PARTS

For Models:KEHC309JBL05, KEHC309JWH05, KEHC309JBT05, KEHC309JSS05
(Black) (White) (Biscuit) (Stainless Steel)

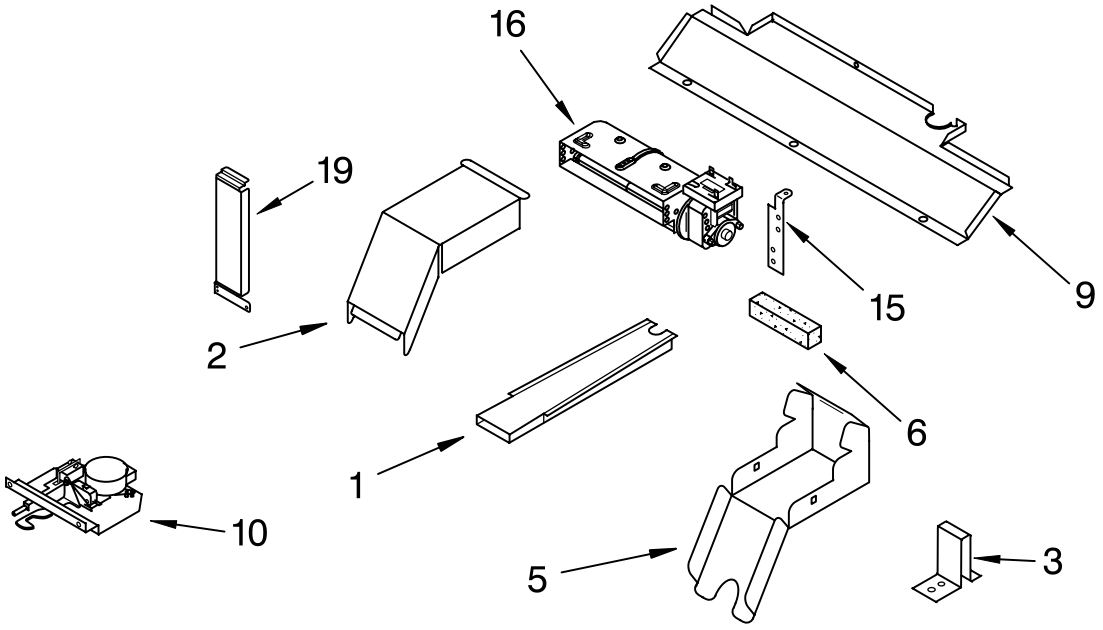

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	4451759	Vent, Exhaust
2	4455178	Elbow, Vent−Top
3	8300791	Bracket, Combo Chassis
	4449809	Screw
5	4455177	Elbow, Vent−Bottom
6	4451758	Seal, Foam
9	4450408	Baffle, Rear
	4449154	Screw
10	8302157	Latch, Motorized
15	4455191	Plate, Blower
16	6610168	Blower
	4449809	Screw
19	4449906	EXT Filler

IMPORTANT
PRODUCT SAFETY INFORMATION

ADVISE CONSUMERS OF AN ELECTROCUTION HAZARD WITH DO – IT – YOURSELF REPAIRS OF MICROWAVE OVENS.

The U.S. Consumer Product Saftey Commission warns against do – it – yourself repairs of microwave ovens. Microwave ovens use high voltage which makes it particularly hazardous for consumers to remove the cover and touch electrical parts.

STRONGLY RECOMMEND THAT CONSUMERS HAVE PROFESSIONALS REPAIR MICROWAVE OVENS.

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models:KEHC309JBL05, KEHC309JWH05, KEHC309JBT05, KEHC309JSS05
(Black) (White) (Biscuit) (Stainless Steel)

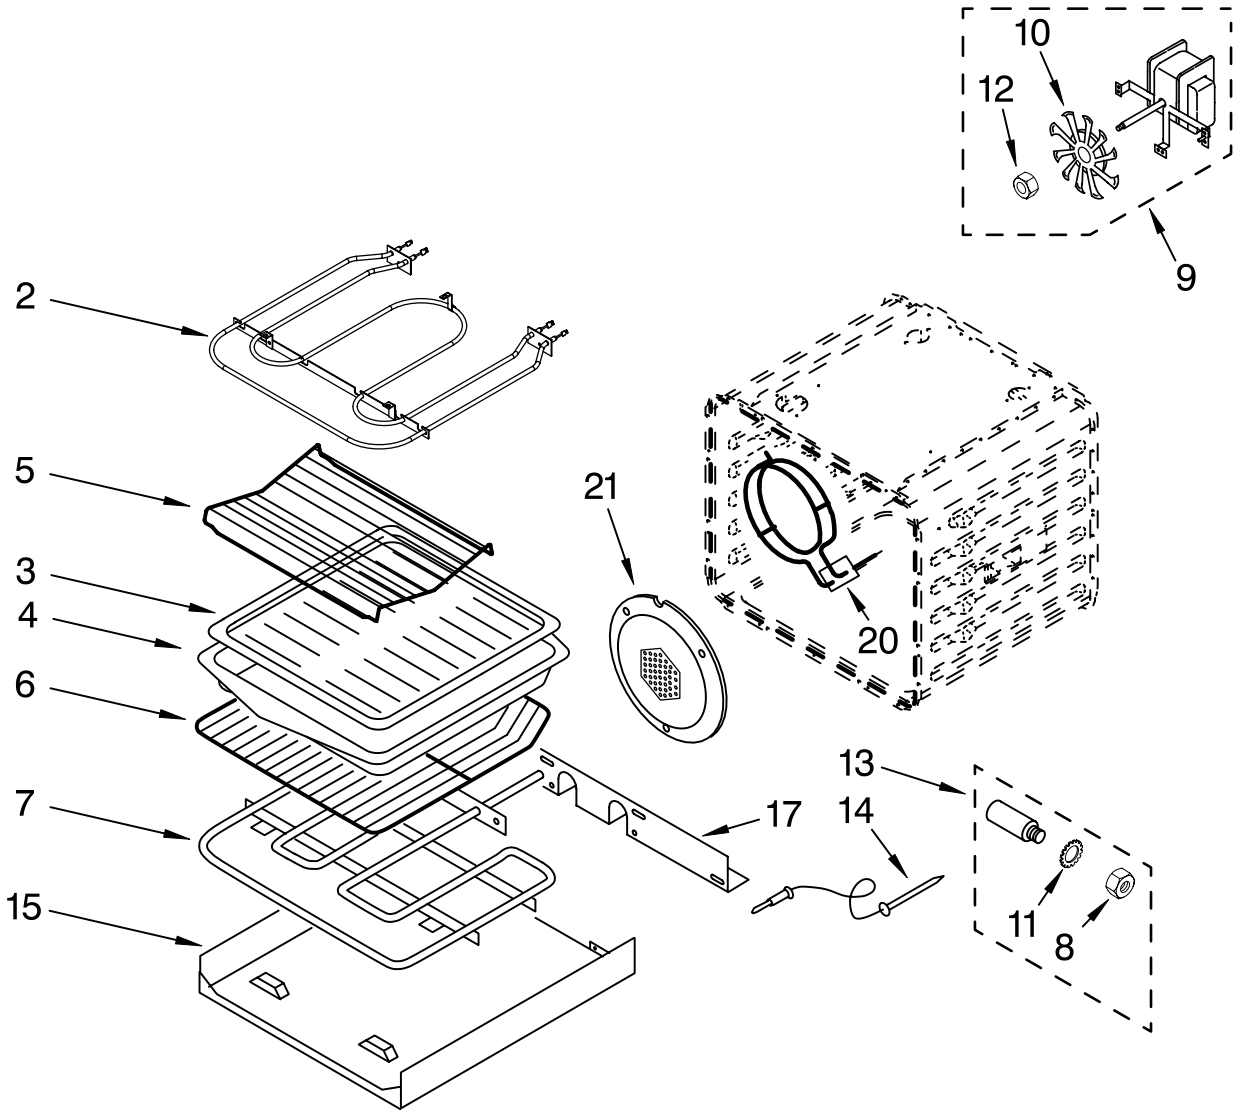

Illus. No.	Part No.	DESCRIPTION
2	4456104	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
5	3181534	Rack, Roasting
6	4448717	Rack, Oven
7	4452155	Element, Bake
8	4448881	Nut, Hex
9	4451583	Convection, Motor
	4449154	Screw
10	4452226	Blade, Fan
11	4448882	Washer, Lock
12	4452227	Nut
13	4451355	Jack, Meat Probe
14	4448948	Probe, Meat
15	4455037	Tray, Bake
17	4450039	Cover, Bake Tray
	4449809	Screw
20	4452157	Element, Convection
	4449154	Screw
21	4448418	Cover, Fan
	4449154	Screw

CABINET AND STIRRER PARTS

For Models:KEHC309JBL05, KEHC309JWH05, KEHC309JBT05, KEHC309JSS05

(Black) (White) (Biscuit) (Stainless Steel)

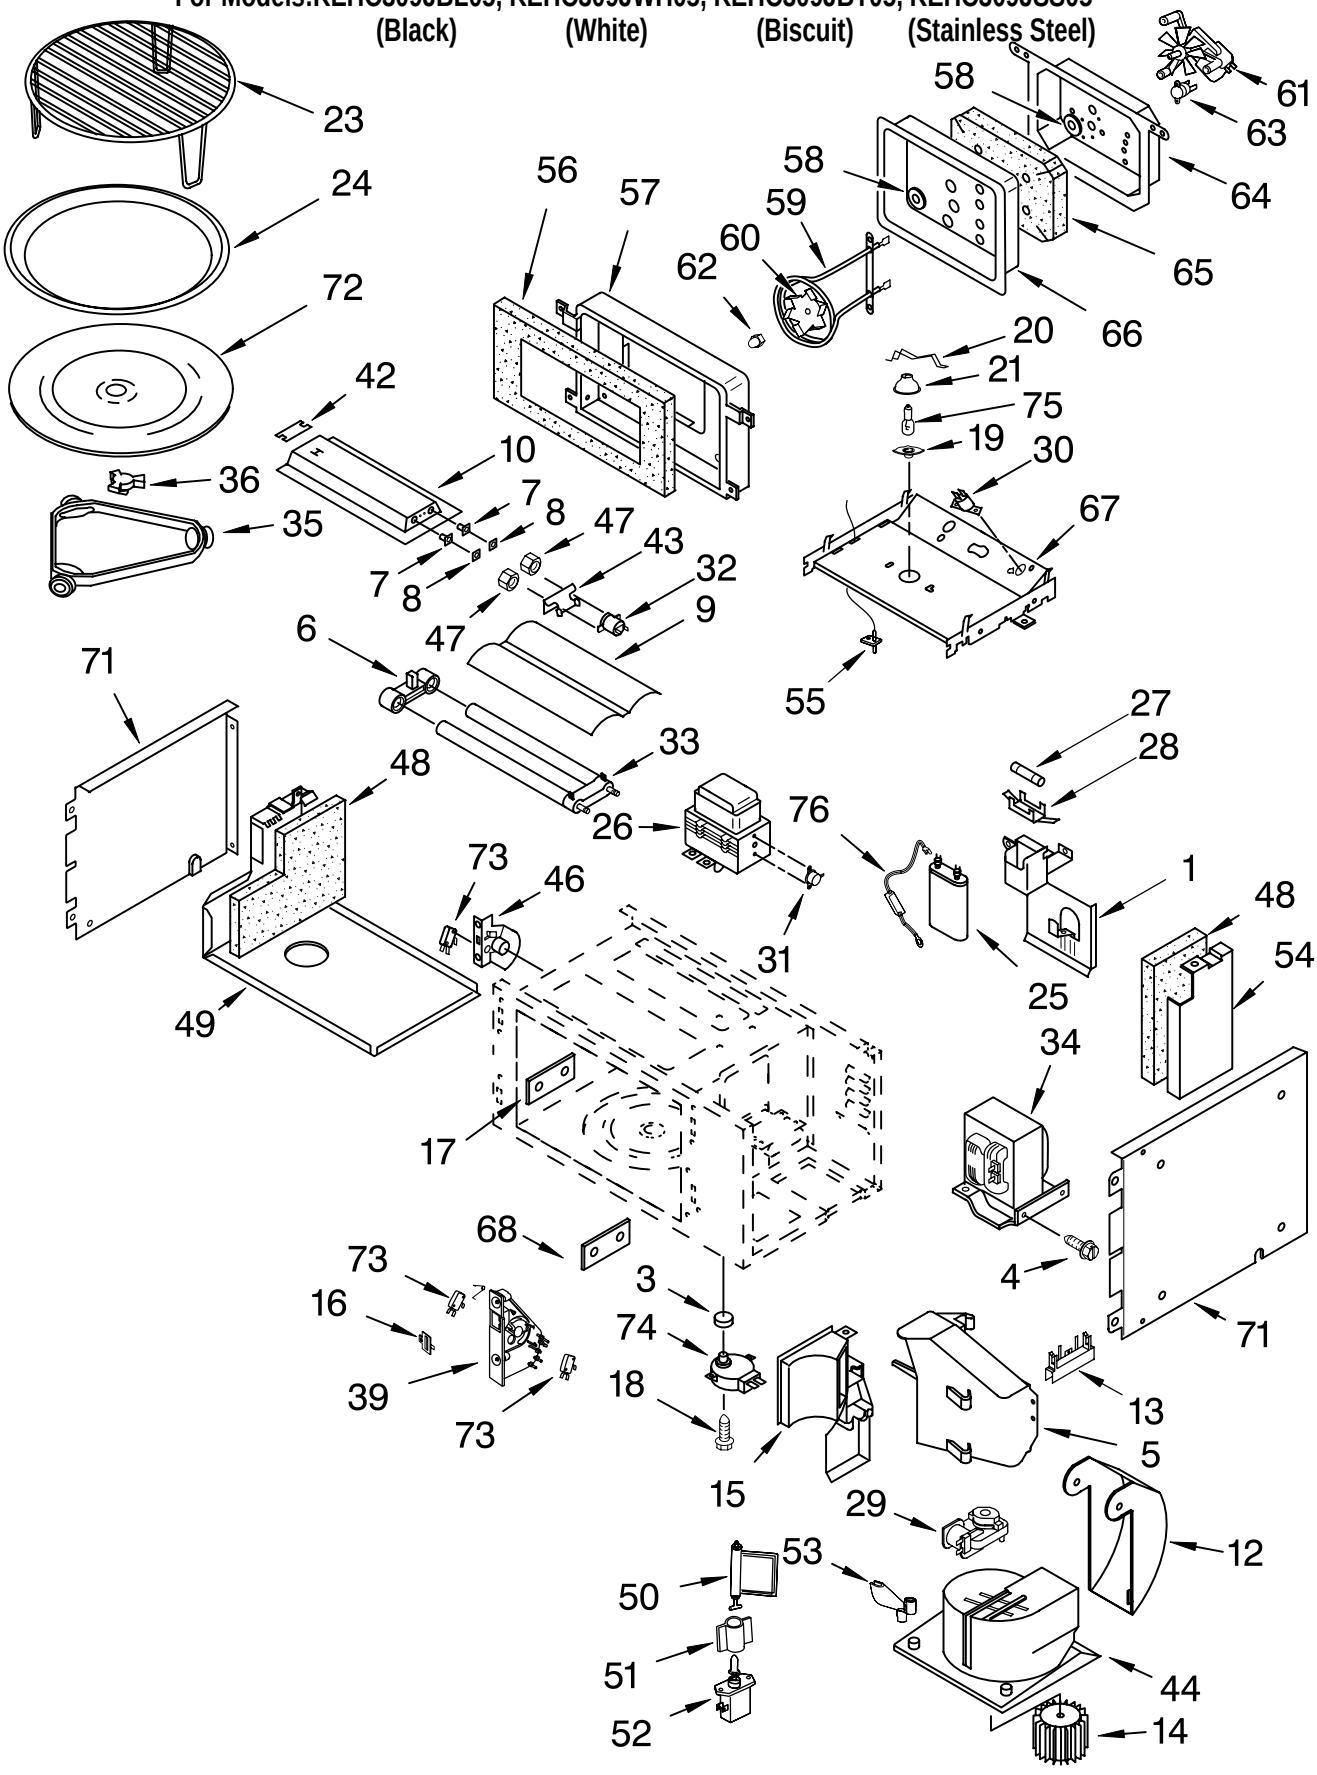

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET AND STIRRER PARTS

For Models:KEHC309JBL05, KEHC309JWH05, KEHC309JBT05, KEHC309JSS05
(Black) (White) (Biscuit) (Stainless Steel)

Illus. No.	Part No.	DESCRIPTION
1	4375437	Bracket, Capacitor
3	4375252	Rubber Ring
4	4375038	Screw
5	4375314	Air Duct, Magnetron
6	4375253	Support, Tube
7	4375421	Plug, Ceramic
8	4375255	Bushing
9	4375256	Reflector
10	4375257	Chamber, Reflector
12	4375450	Duct, Inlet
13	4375316	Insulation, Switch
14	4375322	Fan Wheel
15	4375317	Duct, Air
16	4375415	Block, Slide
17	4375248	Cover Plate, Upper
18	4375251	Screw
19	4375318	Lens, Lamp
20	4375319	Spring
21	4375320	Reflector
23	4452220	Rack
24	4393536	Crisp Plate
25	4375436	Capacitor
26	4375424	Magnetron
27	4375321	Fuse
28	4375231	Block, Fuse
29	4375278	Motor, Blower
30	4375279	Thermostat
31	4375423	Thermostat
32	4375281	Thermostat
33	4375408	Q Tube Assembly
34	4375438	Transformer
35	4375406	Ring, Turntable
36	4375407	Shaft, Turntable
39		Bracket, Hinge
	4375412	Left
	4375413	Right
42	4375331	Plate, Grill
43	4375332	Bracket
44	4375441	Fan Cap
46		Switch Holder
	4375412	Left
	4375413	Right
47	4375258	Nut
48		Insulation
	4375409	Left Side
	4375410	Right Side
49	4375411	Plate, Side
		Bottom
50	4375425	Valve
51	4375428	Screw To Valve
52	4375427	Thermoactuator
53	4375426	Air Bleed
54	4375439	Shield, Heat
		Right
55	4375422	Sensor, Temp.
56	4375420	Insulation
57	4375419	Duct, Heater
58	4375416	Washer
59	4375417	Element, Heater
60	4375418	Fan
61	4375429	Motor, Fan
62		Left−Threaded Nut
		Serviced With
		Motor Item 61
63	4375430	Thermostat
64	4375431	Shield, Heat
65	4375432	Insulation
66	4375433	Chamber, Heat
	Cabinet	
67	4375437	Isolation Plate
68	4375338	Cover Plate
71		Side Plate
	4375341	Left
	4375342	Right
72	4375405	Turntable
73	4375346	Switch
74	4375347	Motor, Turntable
75	4375348	Lamp
76	4375349	Rectifier

MICROWAVE COMPARTMENT PARTS

For Models:KEHC309JBL05, KEHC309JWH05, KEHC309JBT05, KEHC309JSS05
(Black) (White) (Biscuit) (Stainless Steel)

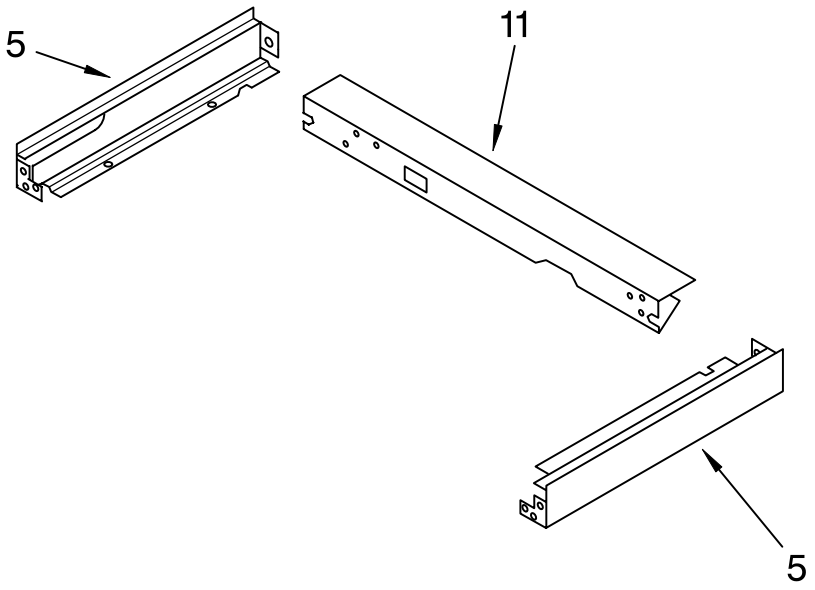

Illus. No.	Part No.	DESCRIPTION
5		Support Rails
	4452551	Right Side
	4452552	Left Side
	4449809	Screw
11	4452548	Rear Channel
	4449809	Screw
	4449154	Screw

TOP VENTING PARTS

For Models:KEHC309JBL05, KEHC309JWH05, KEHC309JBT05, KEHC309JSS05

(Black) (White) (Biscuit) (Stainless Steel)

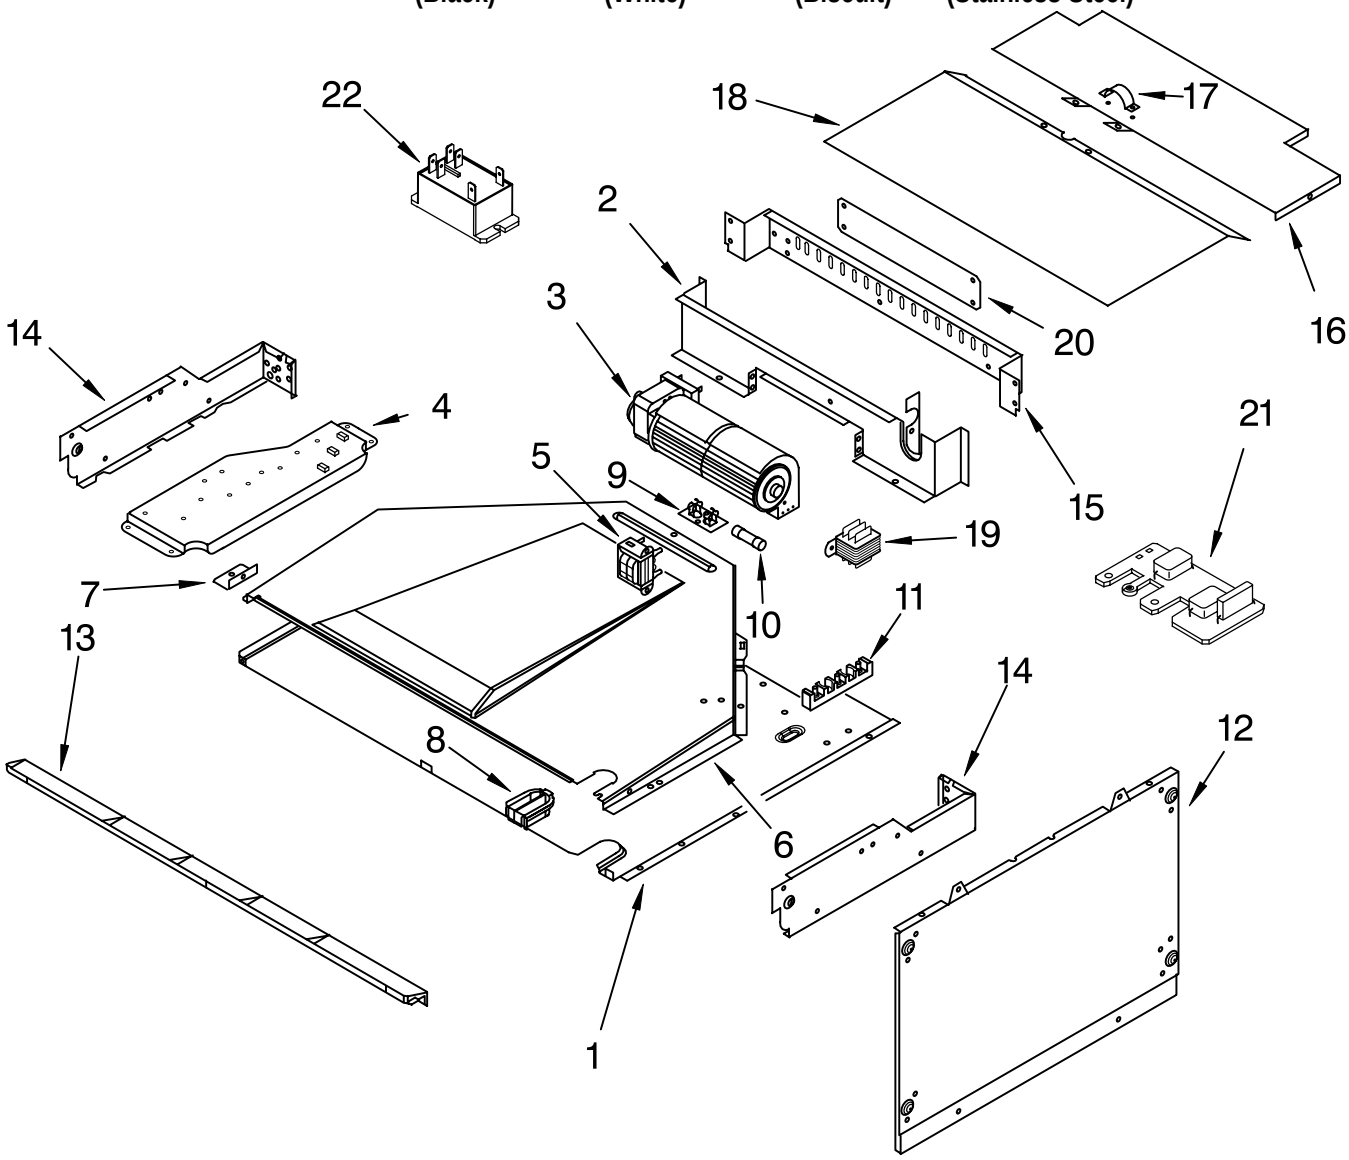

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	4450378	Cover, Top
	4449809	Screw
2	4448935	Baffle, Blower
	1180485	Screw
	4449809	Screw
3	4450920	Blower
	4449809	Screw
4	4451789	Plate, Mounting
5	6610122	Transformer, (Lights)
	4449809	Screw
6	4451634	Exhaust Duct
7	4450027	Bracket, Duct
8	4449964	Grommet
	4449809	Screw
	112432	Nut
9	4454949	Holder, Fuse
	4449154	Screw
10	4454976	Fuse
11	4449868	Block, Terminal
	3400080	Screw
12	4452559	Side, Combo
	4449809	Screw
13	4456145	Vent, Control Panel
	4450038	Screw
14		Side, Control Top
	4451597	Right
	4451598	Left
	4449809	Screw
15	4452244	Back, Control
	4449809	Screw
16	4450551	Cover, Top Rear
	4449809	Screw
17	4448664	Clamp
	4449809	Screw
18	4452367	Cover, Top Front
	4449809	Screw
19	4455038	Transformer, Control
20	4452247	Cover, Plate
	4449809	Screw
21	4451934	Suppressor
22	9752759	Relay, Double Line Break
	4449809	Screw

MICROWAVE DOOR PARTS

For Models:KEHC309JBL05, KEHC309JWH05, KEHC309JBT05, KEHC309JSS05
(Black) (White) (Biscuit) (Stainless Steel)

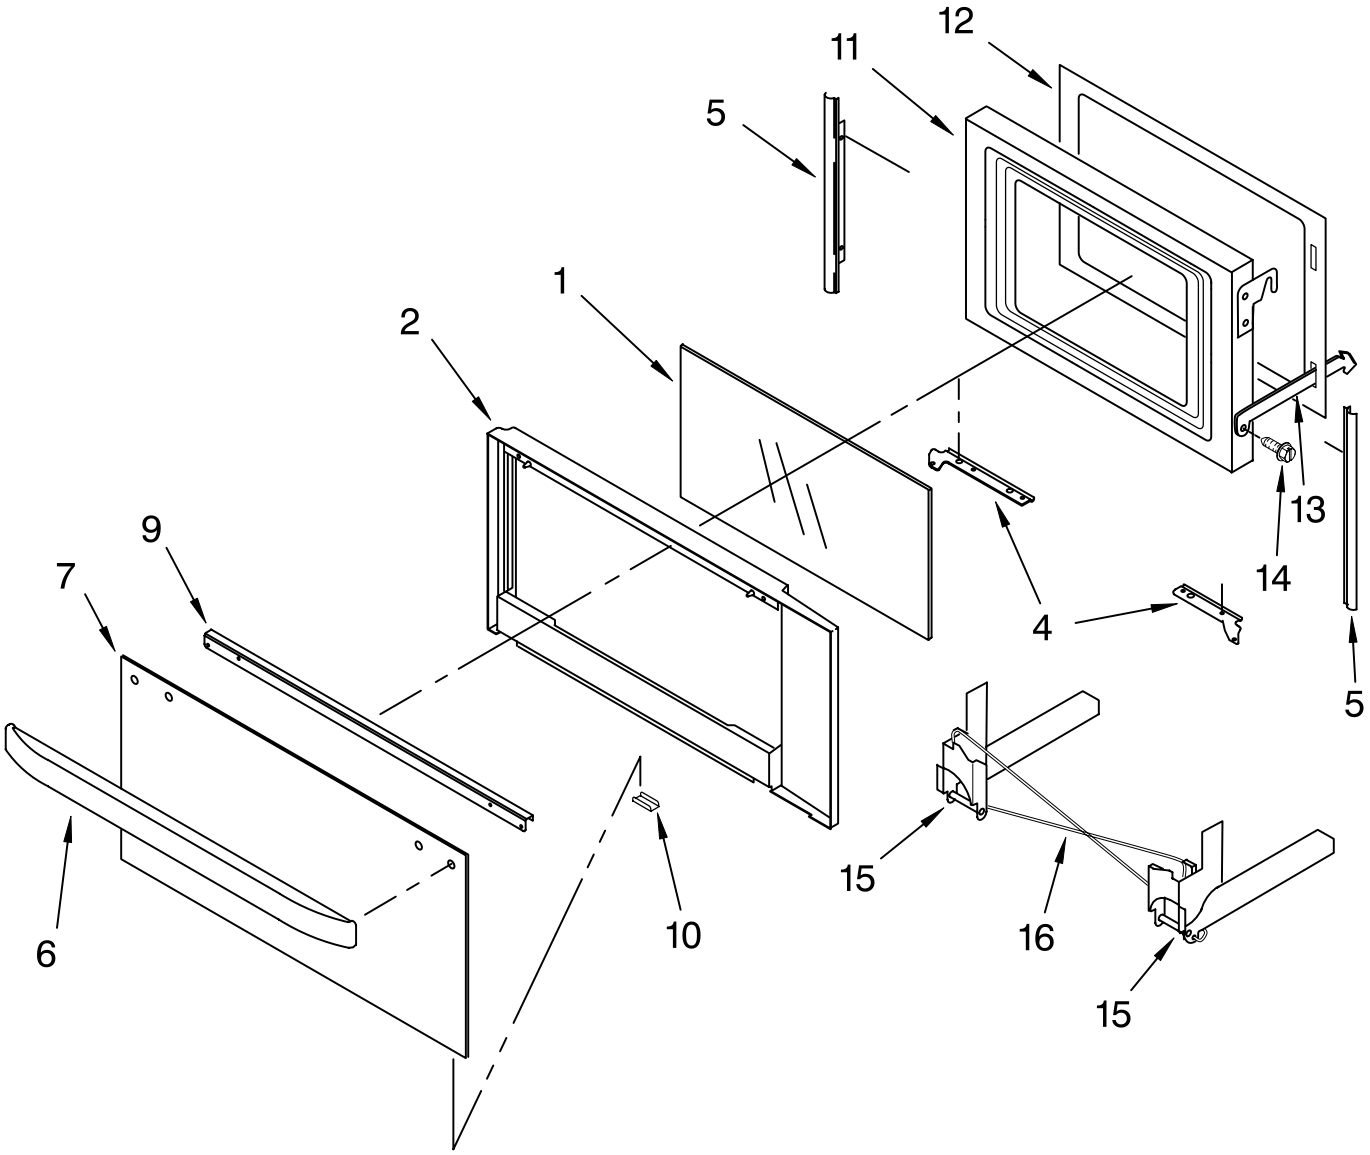

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	4448937	Glass, Middle
2	4450946	Frame, Door
	4450038	Screw
4		Bracket, Mounting
	4449141	Right Side
	4449142	Left Side
	4449809	Screw
5		Filler, Side
	4449083	Right Side
	4449086	Left Side
	4449809	Screw
6		Handle, Door
	4452502	Black
	4452503	White
	4452871	Biscuit
	4452088	Stainless Steel
7		Glass, Outer
	4452211	Black
	4452789	White
	4452995	Biscuit
	4452259	Stainless Steel
9	4452331	Bracket, Handle
	3196184	Screw
10		Retainer, Glass−Clip
	4450863	Black
	4450864	White
11	4375339	Door, Plate
12	4375414	Frame, Inner
13	4375330	Strap, Door
14	4375313	Screw
15		Hinge, Door
	4375323	Left
	4375324	Right
16	4451009	Spring, Torsion

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models:KEHC309JBL05, KEHC309JWH05, KEHC309JBT05, KEHC309JSS05
(Black) (White) (Biscuit) (Stainless Steel)

Illus. No.	Part No.	DESCRIPTION
		PAINT, TOUCH−UP (1/2oz.)
	72017	White
	261869	Cord Brown
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	591014	Adhesive Loctite (1/3 oz.)
	482338	Sealer, Silastic (3 oz.)

Illus. No.	Part No.	DESCRIPTION
		SPLICING WIRES−−25FT. LENGTH
	242828	Wire (12 Ga. 150 c Black)
	242820	Wire (14 Ga. 150 c Black)
	242821	Wire (14 Ga. 150 c Blue)
	242822	Wire (14 Ga. 150 c Brown)
	242830	Wire (14 Ga. 200 c Brown)
	242823	Wire (14 Ga. 150 c Green)
	242824	Wire (14 Ga. 150 c Orange)
	242829	Wire (12 Ga. 150 c Red)
	242825	Wire (14 Ga. 150 c Red)
	242831	Wire (14 Ga. 200 c Red)
	242826	Wire (14 Ga. 150 c White)
	242827	Wire (14 Ga. 150 c Yellow)
	242832	Wire (14 Ga. 200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
		WIRING HARNESS PARTS
	8301909	Harness, Latch
	4449809	Screw
	8301923	Harness, Main
	4450831	Ground (M/W)
	4450800	Screw, Ground
	4449809	Screw
	4450950	Conduit, Combo
	313438	Clip, Harness
	4452222	Spacer, Harness
	4454835	Tie, Cable
	4452400	Lead, Ground
		Miscellaneous
	4448950	Screw, Install (4)
	814381	Hinge Pin Kit

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST